

# Dimensional Letter Installation Instructions for stud mount

## Tools needed for install:

Tape measure - Level - Drill - Drill bit - Removable masking tape to hold template onto wall - Cleaning cloth - Adhesive  
(Masking tape without an aggressive adhesive that could damage the surface when removing)

1. Set Pattern: Level and align mounting pattern on mounting surface. Securely tape flat to surface & perform a final spelling and spacing check.




2. DRILL Mounting Holes  
Use a bit that is slightly larger in diameter than your studs (to allow for some adjustment).  
Drill holes: Hold drill level and drill all marked holes.  
After holes are all drilled, clean (blow) out holes to remove all dust.



Tip: Brick or Block may require using a hammer drill & masonry drill bit

3. DRYFIT Letters  
Insert Letters: Take letters and press into drilled holes (do NOT apply adhesive yet and do not force studs into holes).  
Adjust: If letters do not press easily into holes, open holes (make hole larger with bit) until letters can be set straight.

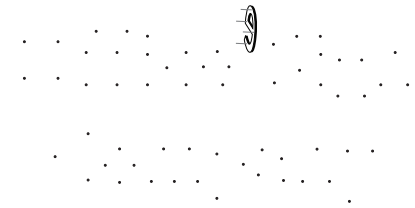

4. INSTALL Letters  
Set Letters: Press studs into drilled holes until the letters touch the wall. Hold letter to wall by placing long strips of masking tape (If Necessary) on the letter face.



5. FINAL Adjustment  
Stand back and view letters at a distance. Hand adjust letters straight by loosening tape and repositioning as needed. Once letters are straight, firmly press tape back onto wall. Secure with more tape if needed. Allow adhesive to set (time may vary based on climate), then remove tape & protective masking. Clean off letter faces.

Office Sign  
Company